



Model 550S Cloudburst Outdoor Shower Parts Identification & Assembly Instructions



CB-01	1	Front Wall with Door Assembly
CB-02	1	Back Wall Assembly
CB-03	2	Side Wall Assembly
CB-04	1	Assembled Shower Floor

Optional Shower Hardware



Economy Shower Hardware
(Cold water Only)



Platinum Shower Hardware
(Hot & Cold)
(Full stainless steel with hand held shower)




Model 550S

Cloudburst Outdoor Shower

Parts Identification & Assembly Instructions

FRONT VIEW

SIDE VIEW

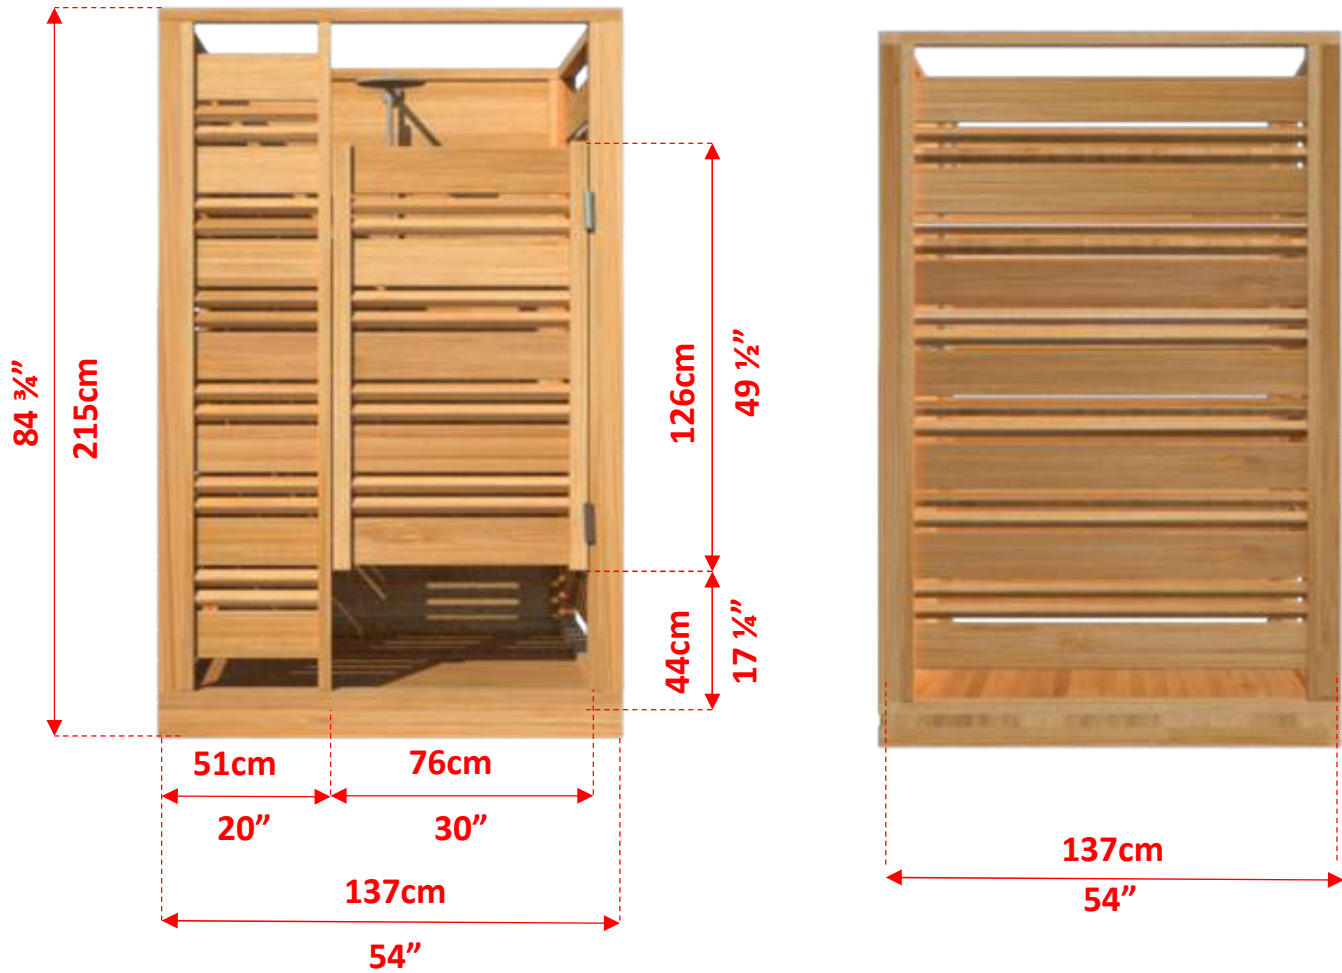

Packaging
83" x 59" x 22" 255 lbs
211cm x 150cm x 56cm 116kgs






Model 550S

Cloudburst Outdoor Shower

Parts Identification & Assembly Instructions

1. Locate the Back Wall Assembly (CB-02) and secure to the assembled shower floor (CB-04) with provided screws as in (Fig.2) making sure back wall is flush to the shower floor.

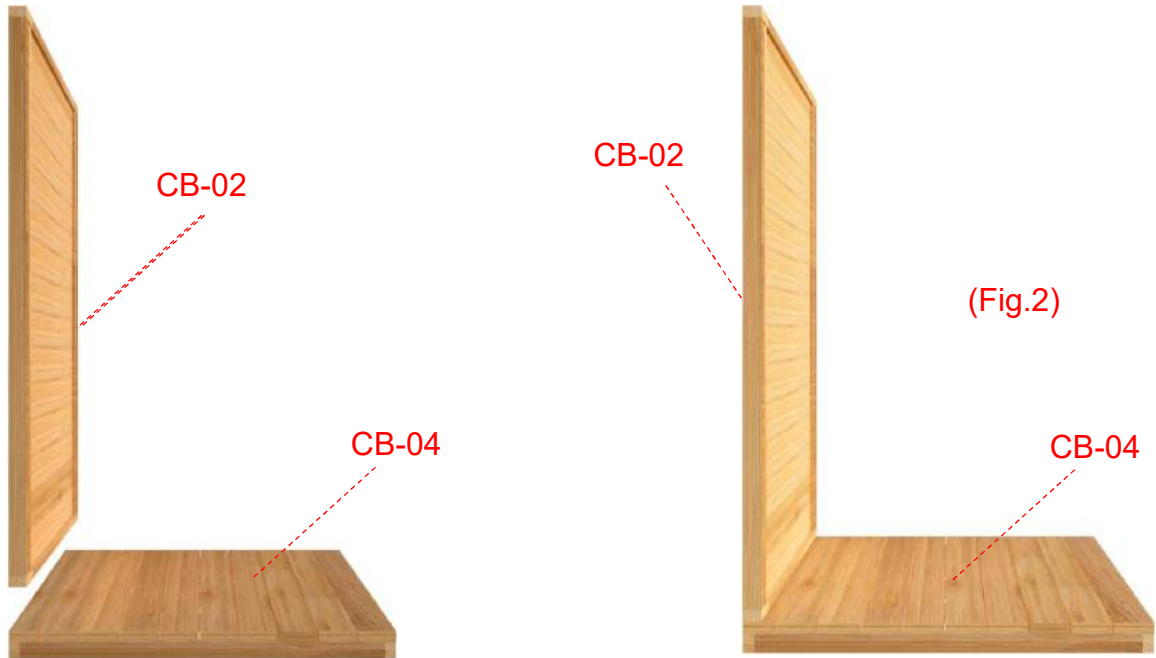

2. Secure one of the side wall assemblies (CB-03) to the assembled floor and the back wall assembly. (CB-02)



Secure back wall assembly to side wall from the back and the side wall down into the assembled floor.



Model 550S

Cloudburst Outdoor Shower

Parts Identification & Assembly Instructions

3. Repeat process for the remaining side wall assembly.



4. Attach the Front Wall Assembly (CB-01) to the 2 side walls with provide screws.

Secure the Front wall to the shower floor with provided screws.



CB-01

Secure the Front wall to the shower floor with provided screws.

5. Attach selected shower head to shower as per the manufacturers instructions.